

JP ENER G PRO B-SERIES PROGRAM CARD

Specification:

Size: 70 x 45 x 13mm

Weight: 23g

Programming procedure for EnErG Pro B series ESC's, using the B series ESC programming card.

1. JP EnErG Pro B-Series program card is easy to use. All of the programmable functions are shown on the program card.
2. Turn on the ESC. Remove the signal wire and plug it into the top-socket on the program card, wait for 2 seconds until the LED is ON.
3. If ESC is connected to a battery, the program card should be connected with a power supply, the range of power supply should be within 5.0-6.3V.
4. Press the button "Menu" on the program card and circularly select each programmable function. At that time the number of the programmable function will be displayed on the left of the LED, the current value will be displayed on the right side. Then press the button "Value" to change the value and press the button "OK" to confirm. At the same time the RED indicating LEDs of both program card and the ESC blink. Turn off the ESC, the modified settings will be saved in the ESC memory.
5. Press button "Reset" to restore the default settings.